

 
Quick Start Guide:



Setting up your GigaSpire BLAST u4m


1

Connect GigaSpire BLAST u4m to power outlet.

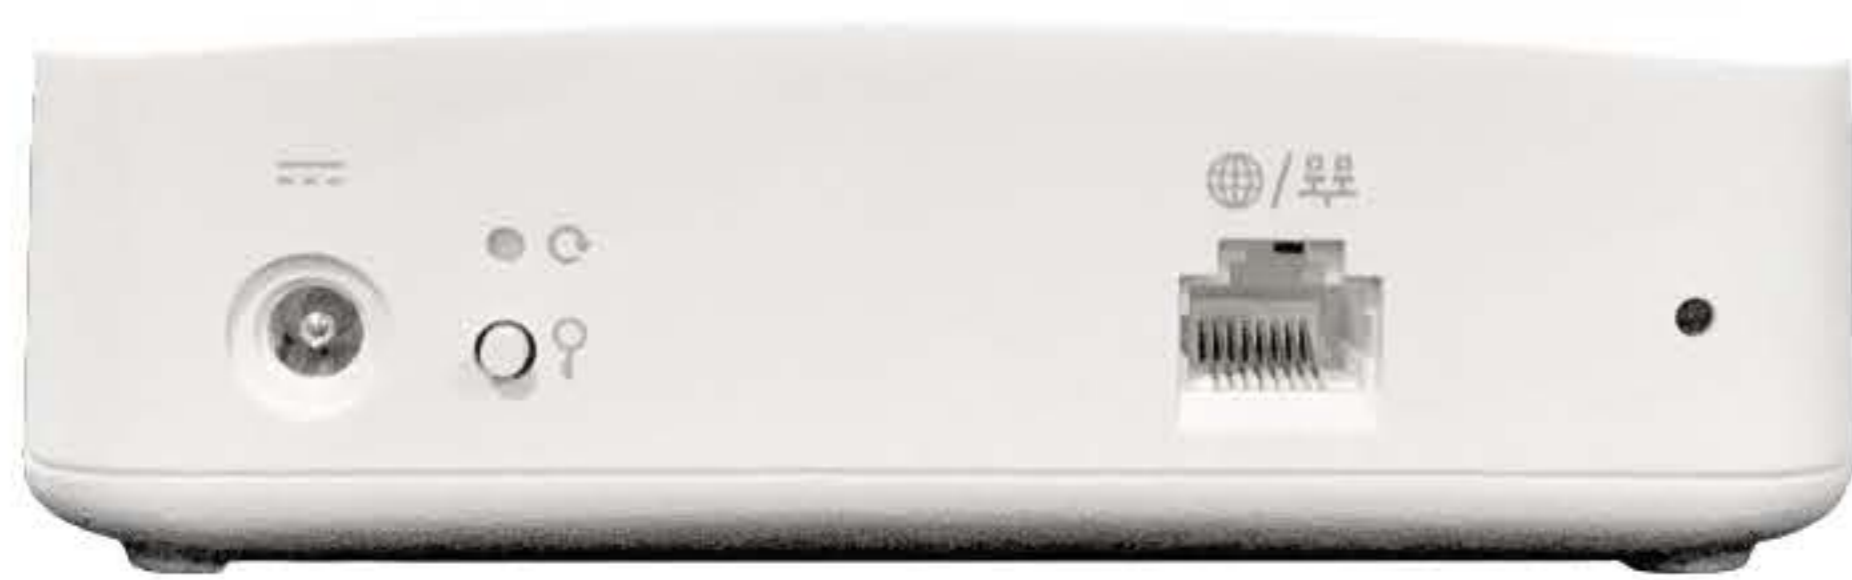

2

 When the LED is flashing red, you can pair the GigaSpire BLAST u4m with the GigaSpire BLAST u6. Press and hold the WPS buttons on the GigaSpire BLAST u4m and then the GigaSpire BLAST u6 for 3 seconds each (less than 30 seconds apart). The LED flash green while attempting to pair.

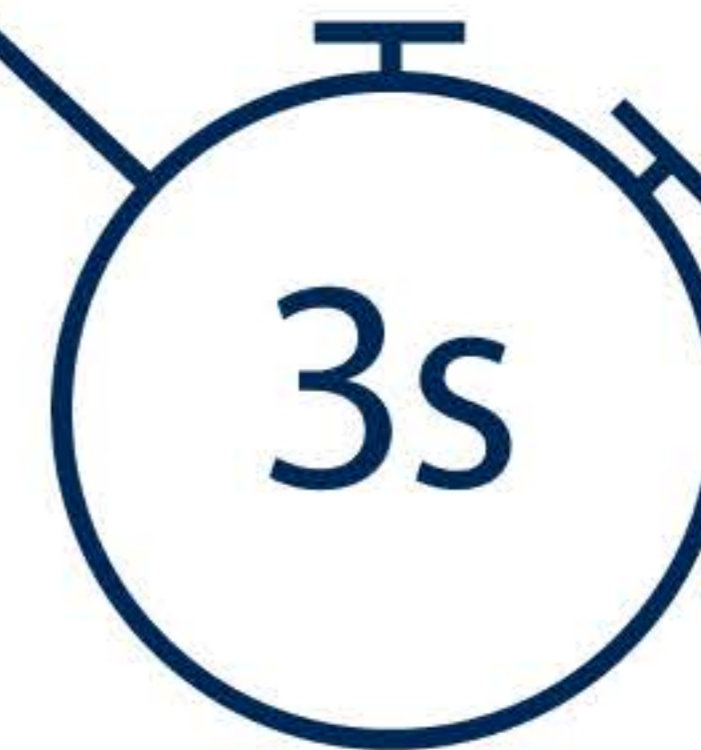


3

Use the solid green LED indicator (displays for 60 seconds at end of pairing cycle) to determine ideal location for the GigaMesh. If necessary, relocate it to a more ideal distance from the GigaSpire BLAST and confirm successful pairing after the GigaMesh reboots (repeating steps 2-3 as needed).

GigaSpire BLAST u4m location is ideal distance from the GigaSpire BLAST u6.
Ideal: Steady State



 Move GigaSpire BLAST u4m close to the GigaSpire BLAST u6.
Too close: Fast Blink (250 msec)

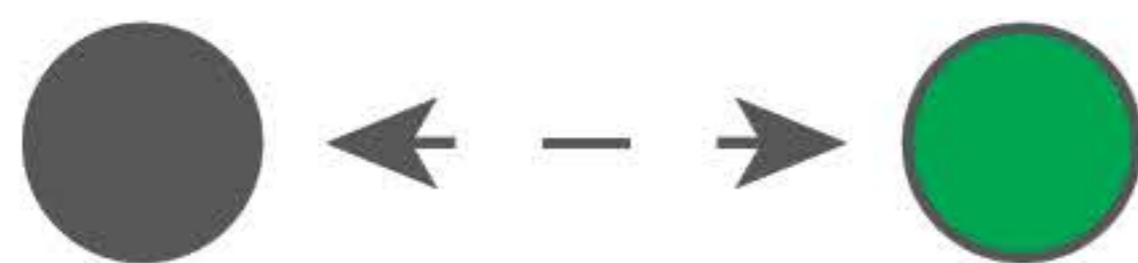

Move GigaSpire BLAST u4m father away from the GigaSpire BLAST u6.
Too far: Slow Blink (1000 msec)



4

If applicable, use the CommandIQ app to set up the GigaSpire BLAST. See the CommandIQ Quick Start Guide for guidance.

Need help?

Contact support: 662-932-3500 northcentralconnect.com